



LED FUNCTION

The LED's

There are two different LED's that will be referred to in this manual; the first is the "Start Button" LED and the second is the "Dawg Tag" LED. Each LED works independently.

The Start Button LED provides visual system status for arming and Ignition as follows:

- When system is Armed: The LED will Flash 1 time every second.
- When the vehicle is running: The LED will stay ON
- When the vehicle is turned off: The LED will go OFF then begin flashing upon Arm

